

The Standard Hydrobath

INSTALLATION INSTRUCTIONS

1. Determine the position of the bath. Please take note that the door is not waterproof, so some water will overspill onto the floor during the washing process, as well as from the dog as it leaves the bath.
2. The electrical supply should be via an RCD protected socket which meets IP65 standards. This protects against splashing water and can also be used outdoors. **BECAUSE OF THE POTENTIAL DANGERS, WE STRONGLY RECOMMEND THAT THE ELECTRICAL WORK ON THE BATH IS CARRIED OUT BY A SUITABLY QUALIFIED ELECTRICIAN.**
3. The sump can either be filled up by local taps, buckets or a hose.
4. Contaminated water needs to be discharged into a foul water drain. This can be achieved by draining the bath locally into a bucket, or by extending the waste pipe to an appropriate point. Please note that the bath must be higher than the outlet pipe.

OPERATING INSTRUCTIONS

1. Ensure the bath is plugged in.
2. Fill the sump with warm water, either with a bucket, Hose or Local taps. **DO NOT OVERFILL** as this will lead to water overflowing through the door. Close the valve when the sump is approximately two thirds full and above the inlet filter.
3. Turn on the pump, which will now recycle the water in the sump.
4. **DO NOT DIRECT THE WATER AT THE DOOR.** The door does not have a watertight seal - it is splashproof only.
5. To empty the sump open the waste valve.
6. Repeat the cycle with shampoo, additives and clean water as often as required.



The heating element is thermostatically controlled to 40 C. This can be adjusted by removing the outer cover, please ensure you switch off all the electrics first. Some elements have a cut out switch, if the temperature gets too high, e.g. if there is no water in the tank. If this happens press the reset button shown on the left.

